


SHARP®

Instruction manual model SPC073

Thank you for your purchase. The utmost care has gone into the design and manufacture of your clock. Please read these instructions carefully and keep them for future reference.

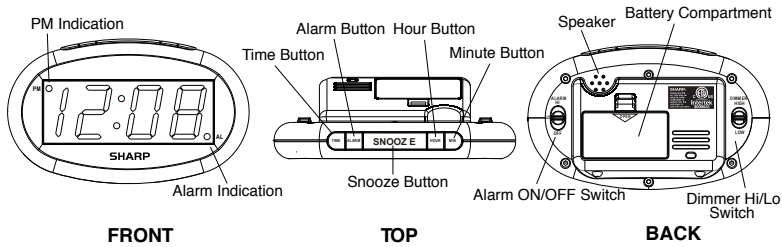

Quick Start Guide

POWER SUPPLY

- * Begin by plugging in the power cord into a standard household outlet. The display will flash indicating the time is ready to be set.

SETTING THE TIME

- * Hold down the TIME button and then press HOUR button to set the correct hour. The PM indicator will light when the hour is advanced into the PM time.
- * Hold down the TIME button and then press MINUTE button to set the correct minute.
- * Release the TIME button when the correct time is shown on display.

SETTING THE ALARM

- * Hold down the ALARM button and then press HOUR button to set the correct hour. The PM indicator will light when the hour is advanced into the PM time.
- * Hold down the ALARM button and then press MINUTE button to set the correct minute.
- * Release the ALARM button when the correct alarm time is shown on display.

USING THE ALARM

- * Slide the Alarm ON/OFF switch to ON position. The alarm indication will appear on lower right side of display.
- * Slide the Alarm ON/OFF switch to OFF position to deactivate the alarm. The alarm indicator dot will appear on the lower right side of display.

USING THE SNOOZE

- * Press the SNOOZE button when the alarm sounds will stop the alarm and the alarm will sound again in nine minutes.
- * The snooze function can be repeated many times.

USING THE DISPLAY DIMMER SWITCH

- * Press the DIMMER HI/LO switch to HI position for brighter display.
- * Press the DIMMER HI/LO switch to LO position for normal display.

USING THE BATTERY BACK UP

- * Insert TWO "AA" batteries into the battery compartment at the backside of clock. The battery will keep the alarm and time settings until the power is restored. The LED display will not light-up but the alarm will sound at the preset alarm time. If there is no battery installed but the power is interrupted, the display will flash at 12:00 and the time and alarm need to be set again.

Battery Warning

Clean the battery contacts and also those of the device prior to battery installation. Follow the polarity (+) and (-) to place battery. Do not mix old and new batteries. Do not mix Alkaline, Standard (Carbon - Zinc), or Rechargeable (Nickel - Cadmium) batteries. Incorrect battery placement will damage the clock movement and battery may leak. Exhausted battery is to be removed from the product. Remove batteries from equipment which is not to be used for an extended period of time. Do not dispose of batteries in fire. Batteries may explode or leak.

FCC INFORMATION

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and receiver.
- * Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- * Consult the dealer or an experienced radio/TV technician for help.

One Year Limited Warranty

M.Z. Berger & Company warrants the original consumer purchaser of this product that it shall be free of defects in materials and workmanship for one year from the purchase date of this product. Defects caused by tampering, improper use, unauthorized modifications or repairs, immersion in water or abuse are not covered by this warranty. If a defect covered by this warranty occurs during the warranty period, wrap your clock carefully and send it to the following address:

MZ Berger Service Center
29-76 Northern Boulevard
Long Island City, NY 11101

You must include a Proof of Purchase, either the original receipt or a photocopy and a check or money order for USD \$6.00 to cover the cost of handling. Also include your return address inside the package. M.Z. Berger will repair or replace the clock and return it to you. M.Z. Berger will not be liable for any loss or damage, including incidental or consequential damages of any kind; from any breach of warranty either expressed or implied relating to the product. Since some states do not allow the exclusion or limitation of incidental or consequential damages, this limitation may not apply to you.

Printed in China

Model SPC 073

SHARP registered in the U.S. Patent and Trademark Office.

Safety Instructions

1. Read Instructions-All the safety and operating instructions should be read before the appliance is operated.
2. Retain Instructions - The safety and operating instructions should be retained for future reference.
3. Heed Warnings - All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow Instructions - All operating and use instructions should be followed.
5. Water and Moisture - The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, and the like.
6. Carts and Stands - The appliance should be used only with a cart or stand that is recommended by the manufacturer.
- 6A. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
7. Wall or Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. Ventilation - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings, or, place in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
9. Heat - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
10. Power Sources-The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
11. Grounding or Polarization-The precaution should be taken so that the grounding or polarization means of an appliance is not defeated.
12. Power-Cord Protection - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
13. Cleaning - The appliance should be cleaned only as recommended by the manufacturer.
14. Nonuse Periods - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
15. Object and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
16. Damage Requiring Service - The appliance should be serviced by qualified service personnel when:
 - A. The power -supply cord or the plug has been damaged; or
 - B. Objects have fallen, or liquid has been spilled into the appliance; or
 - C. The appliance has been exposed to rain; or
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - E. The appliance has been dropped, or the enclosure damaged.
17. Servicing - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

DIGITAL ALARM CLOCK



WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE, OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

ATTENTION : POUR PRÉVENIR LES CHOCS ÉLECTRIQUES NE PAS UTILISER CETTE FICHE POLARISÉE AVEC UN PROLONGATEUR, UNE PRISE DE COURANT, OU UNE AUTRE SORTIE DE COURANT SAUF SI LES LAMES PEUVENT ÊTRE INSÉRÉES À FOND SANS EN LAISSER AUCUNE PARTIE À DÉCOUVERT.

Please read this before operating your unit.