


SHARP®

Instructions & Warranty

Thank you for your purchase of this quality clock. The utmost care has gone into the design and manufacture of your clock. Please read these instructions and store them in a safe place for future reference.

FEATURES

- Bright 0.7" LED display
- Dual alarm selection
- Loud alarm in ascending steps
- Repeat 9 minute snooze
- Requires 2 "AAA" batteries for back-up
- AC 120V, 60 Hz, ETL approved

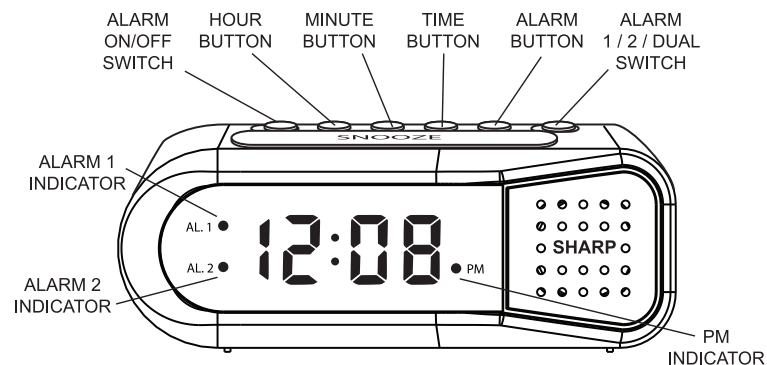

Power Supply

- Begin by plugging in the power cord into a standard household outlet. The display will flash indicating it needs to be set.

Setting The Time

- Hold down the TIME button and then press HOUR button to set the correct hour. The PM indicator will light when the hour is advanced into the PM time.
- Hold down the TIME button and then press MINUTE button to set the correct minute.
- Release the TIME button when the correct time is shown on display.

Setting The First Alarm

- Slide the ALARM 1/2/DUAL switch to ALARM 1 position to set first alarm.
- Hold down the ALARM button and then press HOUR button to set the correct hour. The PM indicator will light when the hour is advanced into the PM time.
- Hold down the ALARM button and then press MINUTE button to set the correct minute.
- Release the ALARM button when the correct alarm time is shown on display.

Setting The Second Alarm

- Slide the ALARM 1/2/DUAL switch to ALARM 2 position to set second alarm.
- Hold down the ALARM button and then press HOUR button to set the correct hour. The PM indicator will light when the hour is advanced into the PM time.
- Hold down the ALARM button and then press MINUTE button to set the correct minute.
- Release the ALARM button when the correct alarm time is shown on display.

Using The Alarm 1

- Slide the ALARM 1/2/DUAL to ALARM 1 position to choose first alarm.
- Slide the ALARM ON/OFF switch to ON position to activate the alarm. The alarm indicator AL.1 will appear on upper left side of display.
- Slide the ALARM ON/OFF switch to OFF position to deactivate the alarm. The alarm indicator will disappear.

Using The Alarm 2

- Slide the ALARM 1/2/DUAL to ALARM 2 position to choose second alarm.
- Slide the ALARM ON/OFF switch to ON position to activate the alarm. The alarm indicator AL.2 will appear on lower left side of display.
- Slide the ALARM ON/OFF switch to OFF position to deactivate the alarm. The alarm indicator will disappear.

Using The Dual Alarm

- Set AL.1 and AL.2. Once both Alarms are set you can use the DUAL Setting.
- Slide the ALARM 1/2/DUAL to DUAL position to choose both alarms. The alarm will sound at the preset alarm times respectively.
- Slide the ALARM ON/OFF switch to ON position. The alarm indicators AL. 1 and AL.2 will appear on upper and lower left side of display.
- Slide the ALARM ON/OFF switch to OFF position to deactivate both alarms. The alarm indicators will disappear.

Using The Snooze

- Press the SNOOZE button when the alarm sounds will stop the alarm and the alarm will sound again in nine minutes.
- The snooze function can be repeated many times.

Battery Back Up

- Insert two "AAA" batteries into the battery compartment on the bottom of clock. The battery will keep the alarm and time settings until the power is restored. The LED display will not light-up but the alarm will sound at the preset alarm time.

Care Of Your Clock

- Store the clock without a battery when not in use. A soft cloth or a paper towel may be used to clean your clock. Do not use any corrosive cleanser or chemical solutions on the clock. Keep the clock clean and dry to avoid any problems.

If customer service is needed, please email custserv_clocks@mzb.com or call toll free at **1-800-221-0131** and ask for **Customer Service**.
Monday-Friday 9:00AM - 4:00 PM EST

One Year Limited Warranty

M.Z. Berger & Company warrants the original consumer purchaser of this product that it shall be free of defects in materials and workmanship for one year from the purchase date of this product. Defects caused by tampering, improper use, unauthorized modifications or repairs, immersion in water or abuse are not covered by this warranty. If a defect covered by this warranty occurs during the warranty period, wrap your clock carefully and send it to the following address:

M.Z. Berger & Co., Inc.
353 Lexington Ave - 14th Fl.
New York, NY 10016

You must include a Proof of Purchase, either the original receipt or a photocopy and a check or money order for USD \$6.00 to cover the cost of handling. Also include your return address inside the package. M.Z. Berger will repair or replace the clock and return it to you. M.Z. Berger will not be liable for any loss or damage, including incidental or consequential damages of any kind; from any breach of warranty either expressed or implied relating to the product. Since some states do not allow the exclusion or limitation of incidental or consequential damages, this limitation may not apply to you.

Printed in China

Model SPC100

SHARP, registered in the U.S. Patent and Trademark Office.

1. Read Instructions- All the safety and operating instructions should be read before the appliance is operated.
2. Retain Instructions - The safety and operating should be retained for future reference.
3. Heed Warnings - All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow Instructions - All operating and use instructions should be followed.
5. Water and Moisture - The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, and the like.
6. Carts and Stands - The appliance should be used only with a cart or stand that is recommended by the manufacturer.
- 6A. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
7. Wall or Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. Ventilation - The appliance should be situated so that its location or position does not interfere with its proper ventilation, For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings, or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
9. Heat - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
10. Power Sources - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
11. Grounding or Polarization - The precaution should be taken so that the grounding or polarization means of an appliance is not defeated.
12. Power-Cord Protection - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
13. Cleaning - The appliance should be cleaned only as recommended by the manufacturer.
14. Nonuse Periods - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
15. Object and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
16. Damage Requiring Service - The appliance should be serviced by qualified service personnel when:
 - A. The power -supply cord or the plug has been damaged; or
 - B. Objects have fallen, or liquid has been spilled into the appliance; or
 - C. The appliance has been exposed to rain; or
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - E. The appliance has been dropped, or the enclosure damaged.
17. Servicing - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

DIGITAL ALARM CLOCK



WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE, OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

Please read this before operating your unit.