

SHARP

INSTRUCTIONS & WARRANTY


Model# SPC562

Thank you for your purchase of this quality clock. The utmost care has gone into the design and manufacture of your clock. Please read these instructions carefully and store them in a safe place for future reference.


Features:

- LCD display with PM indicator
- Alarm and 5 minute snooze
- Vibration Alarm or Beep Alarm
- Soft display backlight for night viewing
- Requires 3 X AAA batteries (not supplied)

SNOOZE BUTTON

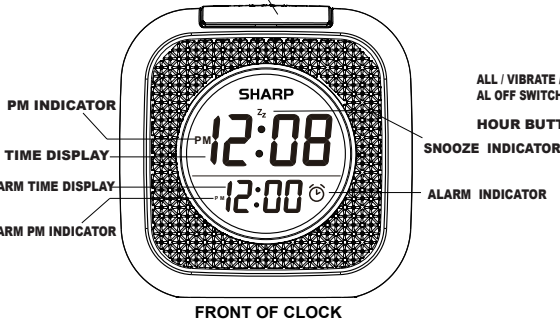

FRONT OF CLOCK

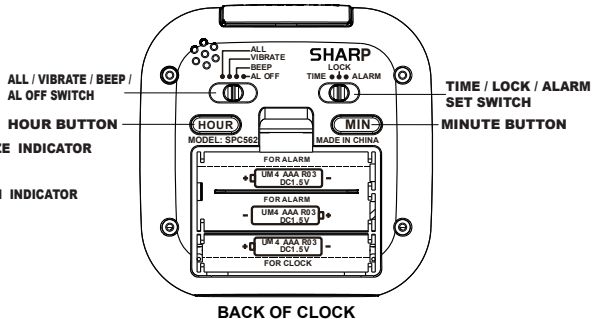

BACK OF CLOCK

INSTALLING OR REPLACING THE BATTERY.

1. Remove the battery compartment cover located on the back of the clock by using your index finger to gently pull down on the latch until you feel the cover release and open.
2. Install three "AAA" alkaline batteries into the battery compartment. Make sure the polarity is correct by following the (+ or -) symbols engraved inside.
3. Replace the battery compartment cover.

SETTING THE TIME

1. Slide the TIME/LOCK/ALARM set switch to TIME position.
2. Press the HOUR button intermittently. Pressing and releasing the HOUR button will advance the hour in one hour increment. Press the hour button until correct hour is displayed.

Note: When setting the hour be sure you are in the correct AM or PM time period. When the "PM" indicator appears on the display, the time displayed is in the 12 hour period between 12:00 noon and midnight.

3. Press the MINUTE button intermittently. Pressing and releasing the MINUTE button will advance the minute in one minute increment. Press the minute button until correct time is displayed.
4. Slide the TIME/LOCK/ALARM set switch to LOCK after setting your time.

SETTING THE ALARM TIME

1. Slide the TIME/LOCK/ALARM set switch to ALARM position.
2. Press the HOUR button intermittently. Pressing and releasing the HOUR button will advance the hour for the alarm time in one hour increments. Press the HOUR button until correct alarm hour is displayed.

Note: When setting the hour be sure you are in the correct AM or PM time period. When the "PM" indicator appears on the display, the time is displayed in 12 hour period between 12:00 noon and midnight.

3. Press the MINUTE button intermittently. Pressing and releasing the MINUTE button will advance the minute for the time in one minute increments. Press the minute button until correct alarm time is displayed.
4. Slide the TIME/LOCK/ALARM set switch to LOCK after setting your alarm time.

ACTIVATING THE ALARM FUNCTION

1. Slide the ALL/VIBRATE/BEEP/ALARM ON/OFF switch to BEEP position for choosing sound alarm. The ALARM ON indicator will appear alarm on LCD display indicating the alarm is activated.
2. Slide the alarm on/off switch to VIBRATE position for choosing vibration alarm.
3. Slide the alarm on/off switch to ALL position for choosing both vibration & sound alarm.
4. To turn the alarm off, slide the alarm on/off switch to the OFF position. The ALARM ON indicator will no longer appear on LCD display indicating the alarm is de-activated.

USING THE BACKLIGHT

Press SNOOZE/LIGHT bar located on the top of the clock to activate the display backlight for 5 seconds. The backlight will stay on for 5 seconds each time it is pressed.

USING THE SNOOZE

To use the snooze, press the SNOOZE/LIGHT bar when the alarm is sounding. The alarm will be silenced temporarily, but will resume sounding after 5 minutes.

CARE OF YOUR CLOCK

1. Store the clock without batteries when not in use.
2. A soft cloth or paper towel may be used to clean your clock. Do not use corrosive cleanser or chemical solutions on the clock. Keep the clock clean and dry to avoid any problems.
3. Avoid putting the clock in a highly humid environment such as poolside or in a bathroom.
4. Do not expose the clock to direct sunlight, extreme hot or cold temperatures.

Note: Please replace your alarm batteries if beep alarm volume is low or vibration alarm strength is weak.

IMPORTANT: Extended storage can cause batteries to leak and damage the unit. Leaky batteries should be discarded immediately. Skin burns or other personal injury can result. Always dispose of batteries according to federal, state and local regulations.

- Clean the battery contacts and also those of the device prior to battery installation.
- Remove batteries from equipment that is not to be used for an extended period of time.
- Remove used batteries promptly.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or recharge able (ni-cad, nimh, etc) batteries.

If customer service is needed, please email at custserv_clocks@mzb.com
or call toll free at **1-800-221-0131** and ask for **Customer Service.**

Monday-Friday 9:00AM - 4:00 PM EST

One Year Limited Warranty

M.Z. Berger & Company warrants the original consumer purchaser of this product that it shall be free of defects in materials and workmanship for one year from the purchase date of this product. Defects caused by tampering, improper use, unauthorized modifications or repairs, immersion in water or abuse are not covered by this warranty. If a defect covered by this warranty occurs during the warranty period, wrap your clock carefully and send it to the following address:

MZ Berger Service Center
29-76 Northern Boulevard
Long Island City, NY 11101

You must include a Proof of Purchase, either the original receipt or a photocopy and a check or money order for USD \$3.00 to cover the cost of handling. Also include your return address inside the package. M.Z. Berger will repair or replace the clock and return it to you. M.Z. Berger will not be liable for any loss or damage, including incidental or consequential damages of any kind; from any breach of warranty either expressed or implied relating to the product. Since some states do not allow the exclusion or limitation of incidental or consequential damages, this limitation may not apply to you.

Printed in China

Model SPC562

SHARP, registered in the U.S. Patent and Trademark Office.