


# SHARP®

## Instructions & Warranty

Thank you for your purchase of this quality clock. The utmost care has gone into the design and manufacture of your clock. Please read these instructions carefully and store them in a safe place for future reference.

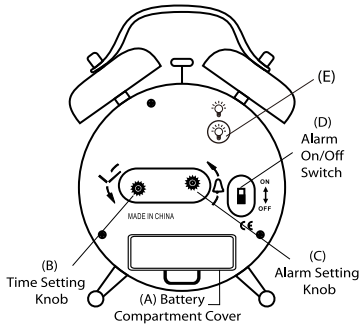

### INSTALLING OR REPLACING THE BATTERY

- Begin by opening the battery compartment cover (A) on the back of the clock.
- Insert 1 "AA" battery (not included) into the battery compartment and make sure the polarity is correct by following the (+ or -) symbols engraved inside.
- Replace the battery compartment cover (A).

### SETTING THE TIME

- On the back of the clock, turn the TIME SETTING KNOB (B) counter clockwise to the correct time.

### SETTING THE ALARM

- On the back of the clock, turn the ALARM SETTING KNOB (C) counter clockwise to the desired alarm time.

### TO SWITCH THE ALARM ON/OFF

- Push the ALARM ON/OFF SWITCH (D) upward to turn on the alarm. Push the switch down to shut off the alarm.

### TO USE THE LIGHT

- Press the Switch (E) to light the clock dial for nighttime viewing.

### CARE OF YOUR CLOCK

- Replace the battery promptly when necessary and store the clock without battery when not in use.
- Be sure to use an Alkaline "AA" battery.
- Do not open the back case of the clock as you may damage the clock movement.
- Clean your clock with a soft cloth or paper towel. Do not use corrosive cleaners or chemical solutions on the clock.

- Avoid putting the clock in a highly humid environment such as poolside or in a bathroom.
- Do not expose the clock to direct sunlight, extreme hot or cold temperatures.

**Note:** Attention! Please dispose of used unit and battery in an ecologically safe manner.



### BATTERY WARNING

- Clean the battery contacts and also those of the device prior to battery installation.
- Follow the polarity (+) and (-) to place battery.
- Do not mix old and new batteries.
- Do not mix Alkaline, Standard (Carbon - Zinc), or Rechargeable (Nickel - Cadmium) batteries.
- Incorrect battery placement will damage the clock movement and battery may leak.
- Exhausted battery is to be removed from the product.
- Remove batteries from equipment which is not to be used for an extended period of time.
- Do not dispose of batteries in fire. Batteries may explode or leak.

If customer service is needed, please email [custserv\\_clocks@mzb.com](mailto:custserv_clocks@mzb.com) or call toll free at 1-800-221-0131 and ask for Customer Service.  
Monday-Friday 9:00AM - 4:00 PM EST

### One Year Limited Warranty

M.Z. Berger & Company warrants the original consumer purchaser of this product that it shall be free of defects in materials and workmanship for one year from the purchase date of this product. Defects caused by tampering, improper use, unauthorized modifications or repairs, immersion in water or abuse are not covered by this warranty. If a defect covered by this warranty occurs during the warranty period, wrap your clock carefully and send it to the following address:

M.Z. Berger & Co., Inc.  
353 Lexington Ave - 14th Fl.  
New York, NY 10016

You must include a Proof of Purchase, either the original receipt or a photocopy and a check or money order for USD \$6.00 to cover the cost of handling. Also include your return address inside the package. M.Z. Berger will repair or replace the clock and return it to you. M.Z. Berger will not be liable for any loss or damage, including incidental or consequential damages of any kind; from any breach of warranty either expressed or implied relating to the product. Since some states do not allow the exclusion or limitation of incidental or consequential damages, this limitation may not apply to you.

Printed in China

Model SPC800

SHARP, registered in the U.S. Patent and Trademark Office.