


# SPC189/SPC193 IM pg1 8/3/2018

## SHARP® LED Alarm Clock with USB Port Instruction Manual & Warranty

Thank you for your purchase of this quality clock. The utmost care has gone into the design and manufacture of your clock. Please read these instructions and store them in a safe place for future reference.

### FEATURES:

1. PM indicator Dot
2. ALARM indicator Dot
3. USB charging port (2 AMP)
4. USB charging port (2 AMP)
5. TIME button
6. ALARM button
7. ALARM ON/OFF button
8. HOUR button
9. MINUTE button
10. BATTERY door
11. SNOOZE button
12. SNOOZE button

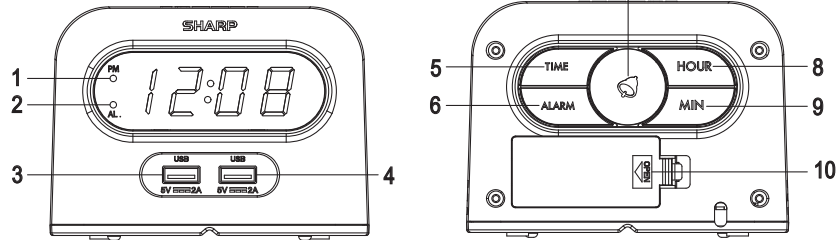

### POWER SUPPLY

- Begin by plugging in the power cord into a standard household outlet. The display will flash indicating it needs to be set.

### SETTING THE TIME

- Press and hold the TIME button down to activate time setting.
- While holding down the TIME button, press the HOUR button to advance to the correct hour. The PM indicator will light when the hour is advanced into the PM time.
- While holding down the TIME button, press the MINUTE button to advance to the correct minute.
- Release the TIME button when the correct time is shown on the display.

### SETTING THE ALARM

- Press and hold the ALARM SET button down to activate alarm setting.
- While holding down the ALARM button, press the HOUR button to advance to the correct hour. The PM Indicator will light when the hour is advanced into the PM time.
- While the holding down the ALARM button, press the MINUTE button to advance to the correct minute.
- Release the ALARM button when the correct alarm time is shown on the display.

### USING THE ALARM

- Press the ALARM ON/OFF button, the ALARM indicator dot will be lit and the alarm will sound at the preset time.
- Press the ALARM ON/OFF button again, the ALARM Indicator dot will no longer be visible.

NOTE: The default is OFF setting.

### USING THE SNOOZE

- Slightly pressing the cabinet down, will activate the snooze function. Pressing the snooze when the wake up alarm is sounding will cause the alarm to stop and the alarm will sound again in nine minutes. This will happen each time when the SNOOZE button is pressed.

### USB CHARGING FUNCTION

- Conveniently charge your Smartphone.
- To charge, connect your USB device to the USB port of this alarm.
- Use only with devices that require 5V USB power. USB port provides 2000mA recharging current.
- Devices requiring more than 2000mA should not be used. Charging time may vary for different devices.

NOTE: Charging function may not be supported for all phones or electronic devices. When both of the USB ports are being used, both can provide 2000mA output. The USB power will raise up to 4000mA if only one USB is connected.

### BATTERY BACK UP

- Remove the BATTERY DOOR and insert two new "AAA" batteries (not included) in the direction of the polarity symbols.
- Please make sure the batteries are new and inserted correctly.
- The battery will hold the ALARM and TIME settings if the power is interrupted. There will be no display under battery power and the ALARM will sound at the correct time. If there is no battery and the power is interrupted, the display will flash 12:00 and the ALARM / TIME will need to be reset.

### BATTERY WARNING

- Clean the battery contacts and also those of the device prior to battery installation. Follow the polarity (+) and (-) to place battery.
- Do not mix old and new batteries.
- Do not mix Alkaline, Standard (Carbon - Zinc), or Rechargeable (Nickel - Cadmium) batteries.
- Incorrect battery placement will damage the clock movement and battery may leak.
- Exhausted battery is to be removed from the product.
- Remove batteries from equipment which is not to be used for an extended period of time.
- Do not dispose of batteries in fire. Batteries may explode or leak.

### CARE OF YOUR CLOCK

- Replace the back up battery annually, or store the clock without a battery when not in use. A soft cloth or a paper towel may be used to clean your clock. Do not use any corrosive cleaner or chemical solutions on the clock. Keep the clock clean and dry to avoid any problems.

If customer service is needed, please email [custserv\\_clocks@mzb.com](mailto:custserv_clocks@mzb.com)  
or call toll free at **1-800-221-0131** and ask for **Customer Service**.

Monday-Friday 9:00AM - 4:00 PM EST

### One Year Limited Warranty

M.Z. Berger & Company warrants the original consumer purchaser of this product that it shall be free of defects in materials and workmanship for one year from the purchase date of this product. Defects caused by tampering, improper use, unauthorized modifications or repairs, immersion in water or abuse are not covered by this warranty. If a defect covered by this warranty occurs during the warranty period, wrap your clock carefully and send it to the following address:

M.Z. Berger & Co., Inc.  
353 Lexington Ave - 14th Fl.  
New York, NY 10016

You must include a Proof of Purchase, either the original receipt or a photocopy and a check or money order for USD \$6.00 to cover the cost of handling. Also include your return address inside the package. M.Z. Berger will repair or replace the clock and return it to you. M.Z. Berger will not be liable for any loss or damage, including incidental or consequential damages of any kind; from any breach of warranty either expressed or implied relating to the product. Since some states do not allow the exclusion or limitation of incidental or consequential damages, this limitation may not apply to you.

Printed in China

Model SPC189/SPC193

SHARP, registered in the U.S. Patent and Trademark Office.

## IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions – All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions – The safety and operating instructions should be retained for future reference.
3. Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions – All operating and use instructions should be followed.
5. Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacture's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug the apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. Please keep the unit in a good ventilation environment.
15. CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

**WARNING:** The mains plug is used as disconnect device, the disconnect device shall remain readily operable.

This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth. Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.



**WARNING:** All above markings were located on the bottom external enclosure of the apparatus, except for label of Date Code was pasted inside the battery compartment.

The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**WARNING:** The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

## DIGITAL ALARM CLOCK

 <p>This lightning flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.</p>	<p><b>CAUTION</b> <b>RISK OF ELECTRIC SHOCK</b> <b>DO NOT OPEN</b></p> <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (ON BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product</p>
---	---	--

**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE, OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

Please read this before operating your unit.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.